


FRACTURE

FR-1

The Audible Disease Fracture FR-1 is a dilapidated high-gain oscillating distortion and tremolo unit designed to bring broken audio hurting to your sound. Controls allow you to adjust the speed of the tremolo sound (the SPEED knob) as well as the oscillation of the distorted sound (the STAGGER knob). The LED next to the SPEED knob gives you a visual cue as to how fast the tremolo is pulsing. Tremolo speeds range from extremely fast to extremely slow (about 60 milliseconds to 3.4 seconds). Plug it in for loads of decayed audio torment!

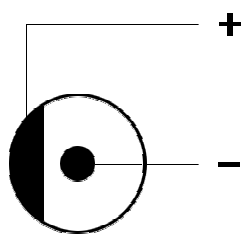

9 volt DC only

The Fracture FR-1 is powered with a standard adapter with a "barrel" type tip (9 volts DC negative center pin) or with a 9-volt battery. We recommend the **Visual Sound 1 SPOT** power adapter (available through NoiseFX). If the battery should cease to function, simply remove the 4 screws on the bottom of the unit, remove the base and replace the battery with a fresh one. Unplug the cord from the input jack when not in use for longer battery life.

Contact us at disease@audibledisease.com if you ever have problems with your Fracture FR-1. We'll fix it up!

audible disease
san francisco USA